EP-1600 PARTS LIST	DESCRIPTION	Drive Pawl	Spring Drive Pawl	Tension Handle	Pawl Pin	Pinion Gear	Tension Gear	Bushing	Feedwheel Shaft	Hold Pawl	Gear Housing	Holding Pawl Spring	Pivot Pin	Feedwheel	Lift Arm	Spiral Pin	Base Roll Pin	Wear Plug	Base Spring	Base	Gear Housing Bushing	Set Screw	Retaining Ring	Gear Housing Washer	Gear Housing Screw	
EP-1600 P	PART#	E1600-02	E1600-03	E1600-04	E1600-05	E1600-06	E1600-07	E1600-08	E1600-09	E1600-14	E1600-15	E1600-16	E1600-17	E1600-18	E1600-19	E1600-20	E1600-23	E1600-24	E1600-26	E1600-28	E1600-29	E1600-30	E1600-31	E1600-32	E1600-33	
	QTY	1	П	-	-	П	1		1	2	1	2	-	-	-	П	1	1	1	1	1	1	2	п	П	
	ITEM	2	3	4	2	9	7	æ	6	14	15	16	17	18	19	20	23	24	26	28	59	30	31	32	33	
33 32 33 36 30 30 30 30 30 30 30 30 30 30																										


EP-1600 OPERATING INSTRUCTIONS

Safety Warnings

- Before using the EP-1600 please follow all safety precautions. (Ex: Safety Glasses, Gloves etc.)
- Inspect tool for worn or broken parts before operating.
- Only trained operators should use this tool. Watch fingers and keep them away from the front of the tool
 or by areas that can pinch or cut.
- The EP-1600 is recommended for use with only 5/8" x .023 through 1-1/4" x .035 gauge Steel Strap.
- DO NOT over tension the strap as breakage may occur. Unsafe use of the EP-1600 may result in blindness, severe laceration, amputation or death.

Operating Instructions


- 1. Pull strapping off cart and wrap around load.
- 2. Push seal on the strap with the flat side up.
- 3. Slide the end of the strap through the seal and underneath the other side of the strap.
- 4. Bend the end of the strap back to keep seal in place.

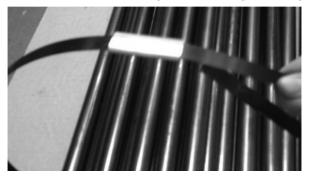



- 5. Squeeze down the tension handle of the EP-1600 against the base and put the top strap against the inside edge of the slot under the nose of the tool.
- 6. Release the handle to lock the strap in place.
- 7. Tighten the strap by raising and lowering the tension handle.



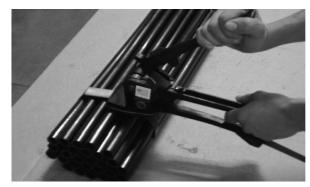

- 8. Use the appropriate Heavy Duty Sealer to seal the pusher in place.
- 9. Tilt the nose of the tool all the way forward and rock backward several times in order to break the top strap.

